

# **SIG MARINE PRODUCTS.**

## **SIGMAR**

**BEFORE YOU DO ANYTHING READ THIS MANUAL!!!  
WARNING!!! DO NOT OPERATE THIS HEATER UNATTENDED.**

**CAUTION!!! NEVER LIGHT:**

- 1. A HOT BURNER**
- 2. A FLOODED BURNER**

**PACKING LIST:**

- 1. 1 1/16" Allen Wrench (valve adjustment)**
- 2. 5 1/4" x 12" Stainless Steel Deflector Plate(only on the 100,120 and 170)**
- 3. Clean out Auger (corkscrew shaped)**
- 4. Draft Regulator (installed) (only on the 100,120 and 170)**

RECOMMENDED SPARE PARTS	PG. 3
BALANCE DRAFT SYSTEM	PG. 4
HEATER INSTALLATION	PG. 5
SAILBOAT MOUNTING	PG. 6
FUEL SUPPLY	PG. 6-8
BACK DRAFTING OR DOWN DRAFTING	PG. 9
FUEL	PG. 9
LIGHTING PROCEDURE	PG. 10-12
STORAGE	PG. 12
METERING VALVE	PG. 13
CLEANING	PG. 14-16
DRAFT ASSIST FAN	PG. 17
DRAFT REGULATOR	PG. 18
TROUBLE SHOOTING	PG. 1

## **INTRODUCTION**

You have just purchased the most advanced diesel cabin heater available. It is designed and built by sailors who know the need for dependable, safe, dry heat and it represents years of experience in the marine-heating field. Installation and operation is straightforward. After you have completely read the instruction manual.

### **FIRST LET'S ANSWER A FEW BASIC QUESTIONS:**

**Q.** What is a Balanced Draft?

**A.** Balanced Draft is a system whereby outside air is supplied to an enclosed combustion chamber and equal pressure is maintained on both the air intake and on the exhaust, so the flame cannot blow out. Conventional heaters can experience “back drafting or down drafting”(see Page 9), a downdraft could travel down the exhaust pipe blowing soot or smoke into the cabin and also blow out the flame completely.

**Q.** All right, no more backdrafting, soot or odors in my boat, but will my boat be dry?

**A.** Yes, with any vented cabin heater all the combustion gases and moisture go up the flue and not into the cabin. Now the dry radiating heat can do its job. The warm air rises causing a natural flow and exchange of air through the boat's ventilation systems. A small circulating fan should be used to aid circulation.

**Q.** Will my Sigmar heater operate on any diesel fuel?

**A.** We would love to say yes, but experience has taught us that some diesel fuel may cause sooting and result in frequent maintenance. Normal Number one (stove oil) and Number two (diesel fuel) burn just fine. Some fuel sold as number two is so poorly refined that it will not burn clean in either your heater or your engine. This type of fuel seems most prevalent in the northeastern U.S. and parts of Alaska. Should you experience this problem, you can do one of the following:

1. You can utilize a separate fuel supply tank with a better grade of fuel.
2. You can tolerate frequent cleaning of the burner.

## **IMPORTANT**

When filling the system for the first time, we suggest tapping the metering valve slightly. This will free all moveable parts due to storage and prevent oil from escaping through the overflow outlet. Also, to remove any air that may get trapped in the fuel hose between the valve and the burner, lift the valve knob up and down a few times and flex the fuel hose. This will act as a pump and force any air that may be trapped in the fuel hose to escape. To check whether fuel has completely filled the system, the fuel should appear at the bottom of the burner. This will mean the fuel has filled the system. Replace all internal burner parts and you are ready to light the heater. Note, this procedure should be repeated after every cleaning cycle.

## **WARNING:**

Unless operating the heater with the balanced draft attachment installed, as shown in manual, be sure to open a vent or porthole to allow sufficient air supply to the heater. ***Never plug any air inlets into the cabin.***

Never operate heater unless all internal parts are in place as shown in manual.

## **RECOMMENDED SPARE PARTS**

Your Sigmar heater has been designed to use very few moving or wearing parts, however we do recommend the following spare parts:

**1. MICA WINDOW-** Your Mica Window may last for 6 months to 2 years depending on how often you use your heater. To replace, simply remove the 9 screws. Using a pointed object and the frame as a template, poke 9 new holes in the Mica and reassemble. **Note:** it is very important that the screws are ***only hand tight***, except for the two screws holding the closing latch, allowing the Mica to expand and contract.

**2. VAPORIZING STEM (FOR 100 & 120)-** This part experiences very little wear, however if the heater is used a lot on a high setting, the tip will eventually burn away. When replacing the stem, it is important that the 4 legs of the stem conform to the curvature of the burner base at all times.













## **“BACK DRAFTING” OR “DOWN DRAFTING”:**

The reason this can occur is because of changes between inside and outside of your boat, caused by windage coming from the sails or across the flying bridge and causing air turbulence on your deck, which creates a high pressure area around the Rain Cap (exhaust pipe), and this can slow, stop or reverse the “drafting “ of the heater or even extinguish the flame. Because the heater is hot, the flame may re-ignite when the fuel flows into the burner. This will cause a loud “bang” and maybe cause smoke or soot in your cabin.

Another reason this can occur is because of a negative pressure inside the boat, which is caused by a hatch, or large port being open on the lee side of the boat. This will cause air to be siphoned out and then the stovepipe (exhaust) will act as a vent to allow air into the boat. This down flow of air in the exhaust pipe is referred to as “down drafting” and it may extinguish your flame. When the flame re-ignites, there will be a “bang” and maybe soot or smoke.

Our “Balanced Draft” System (see Page 4) will solve a majority of these problems.

If you can not install the “Balance Draft” System, a “Draft Assist Fan” (Page 18) can help in off setting down drafts.

Sometimes if you increase the length of stovepipe, (1-2 ft) it will off set the down draft.

## **FUEL:**

Different types of fuel, Diesel No.1 and No.2 or kerosene can vary greatly depending on which oil company supplied the fuel, time of year-summer vs. winter or which part of the world you are in. This viscosity (thickness) can vary by as much as 50% when the temperature is 15 Degrees C. (60 Degrees F.), the diesel may be slightly thicker than water, while at 5 Degrees C. (40 Degrees F.), it may be like syrup. We have designed our metering valve so that adjustments can be made, very easily (see problem 2,page 22). Perhaps you can simply set your heater to a higher or lower setting between summer and winter without adjusting the metering valve adjustment screw.

# **HEATER LIGHTING PROCEDURE**

## **MATERIALS**

To light the heater, you will need the following:

- A piece of toilet tissue or facial tissue (**no paper towels!**)
- Matches or a lighter.
- A 1 oz. container

## **HEATER LIGHTING STEPS**

1. On the 100,120 and 170 open the small door inside. On the 180, 190, 200 and 250, open the top or lid.

2. Pour 1 oz. of kerosene or alcohol into the burner.

**Note:** Alcohol will burn hotter and thus the preheat time is quicker than kerosene, but when you ignite the alcohol, there will be a “poof” from the alcohol fumes---this may scare you, or singe your hair. ***Please be careful!*** Also, it is difficult to see the alcohol burning and you may turn the fuel on prematurely e.g. before the burner is fully preheated. This would cause a pool of fuel to form in the bottom of the burner and you will get smoke because you are not burning “fuel vapors” --- just raw fuel.

3. Tear off a small piece of tissue, about 1 1/2” square and wipe out the 1 oz. measuring container. The oil on the tissue will make it burn easier.

4. Light the fuel-soaked tissue and drop it into the burner, making sure that it lands in the puddle of fuel. ***Be careful when using alcohol methyl hydrate.***

5. Close the door or lid.

6. With the metering valve still “off”, let the heater burn until the puddle of fuel is almost gone. (The flames will start to get smaller.) This is called the pre-heat cycle. It takes approximately 8-10 minutes. But it could be as long as 12-15 minutes. This pre-heat cycle will go through 3 stages.

7. When the puddle of fuel has almost burnt away, turn the metering valve to 3 or 4. The size of the flames should start to burn towards the top of the burner (around the burner ring).

For an illustration of the three stages of burner ignition, see the series of Drawings in Figure 8, **Stages of Burner Ignition.**

**Note:** the single biggest error that people make when lighting the heater is to “**turn on**” the fuel before the burner is fully preheated. Wait until the flame dies down --- almost out, before turning the fuel on.

**A good combustion check can be done at any time during operation. Turn the valve to “off”, after 60 seconds the flame will die down. Turn the fuel to the original setting before it goes out.**


If it doesn’t go out, it means that you have a “pool” of fuel in the burner --- this is caused by turning the fuel “**ON**” before the burner is fully preheated.

Do not worry --- just keep the valve turned ‘off’ until the diesel burns away and the flame starts to die down. Then turn the valve to your regular setting -- probably 3 or 4.


If you are unable to get the flame to burn above the ring, refer to “**Trouble Shooting Problem #2 for Solution**”(Page 22)

## **FIGURE 8. STAGES OF BURNER IGNITION.**


**NOTE:** Illustrations are for the 100 and 120. The 170,180, 190, 200 and 250 have a four post-evaporating stem.

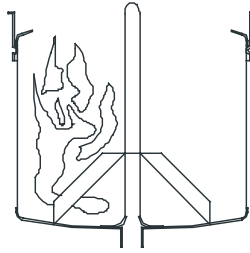

**STAGE 1** A single flame rises up the side of the burner from the burning tissue. Some light smoke from the rain cap is to be expected.

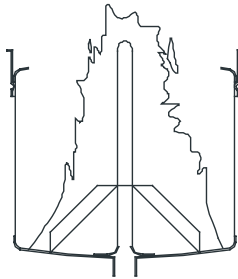

**STAGE 2** Fuel is starting to vaporize and burn. Some light smoking will still be detected.

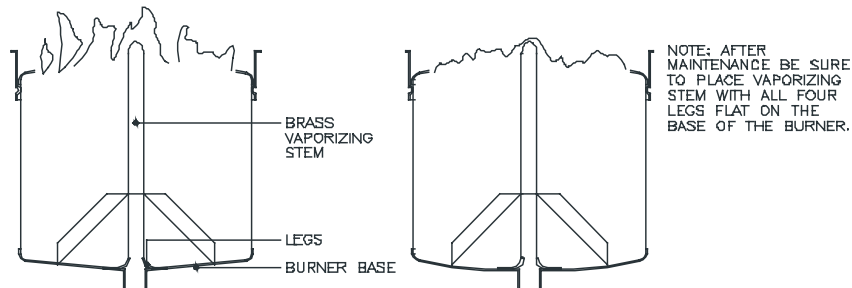

**STAGE 3** In this stage, the flame is now up out of the burner with the base of the flame at the level of the burner ring. This is the correct type of flame for a medium to high setting. On a low setting, some of the flame will still be inside the burner. This is still correct. (See Note).

**NOTE:** On the 170, 180, 200 and 250, the flame can be slightly below the ring and still get good results. If the window should “soot up”, this indicates you are burning it too low--turn valve to a higher number until the window stays clear. On the 100 and 120, the flame must always be above the ring.

## **METERING VALVE**

***ADJUSTMENT:*** Our metering valve is a very simple device and will require little maintenance. However, because of the different fuel viscosity's, some adjustments will be necessary. See ***“Trouble Shooting”*** if necessary (page 22).


## **STORAGE**

When storing the boat heater for long periods e.g. 2 or more months, while the stove is **“burning”** turn off the fuel supply, and leave the metering valve in **“on”** position. This will **“burn”** the fuel in the metering valve and leave the float and the metering stem in the open position. We recommend this to save the rubber needle seat and “O” ring on the metering stem from taking a “set” and maybe sticking or tearing.

# **SIGMAR**

## **THE METERING VALVE**

### **EXPLODED VIEW OF METERING VALVE**

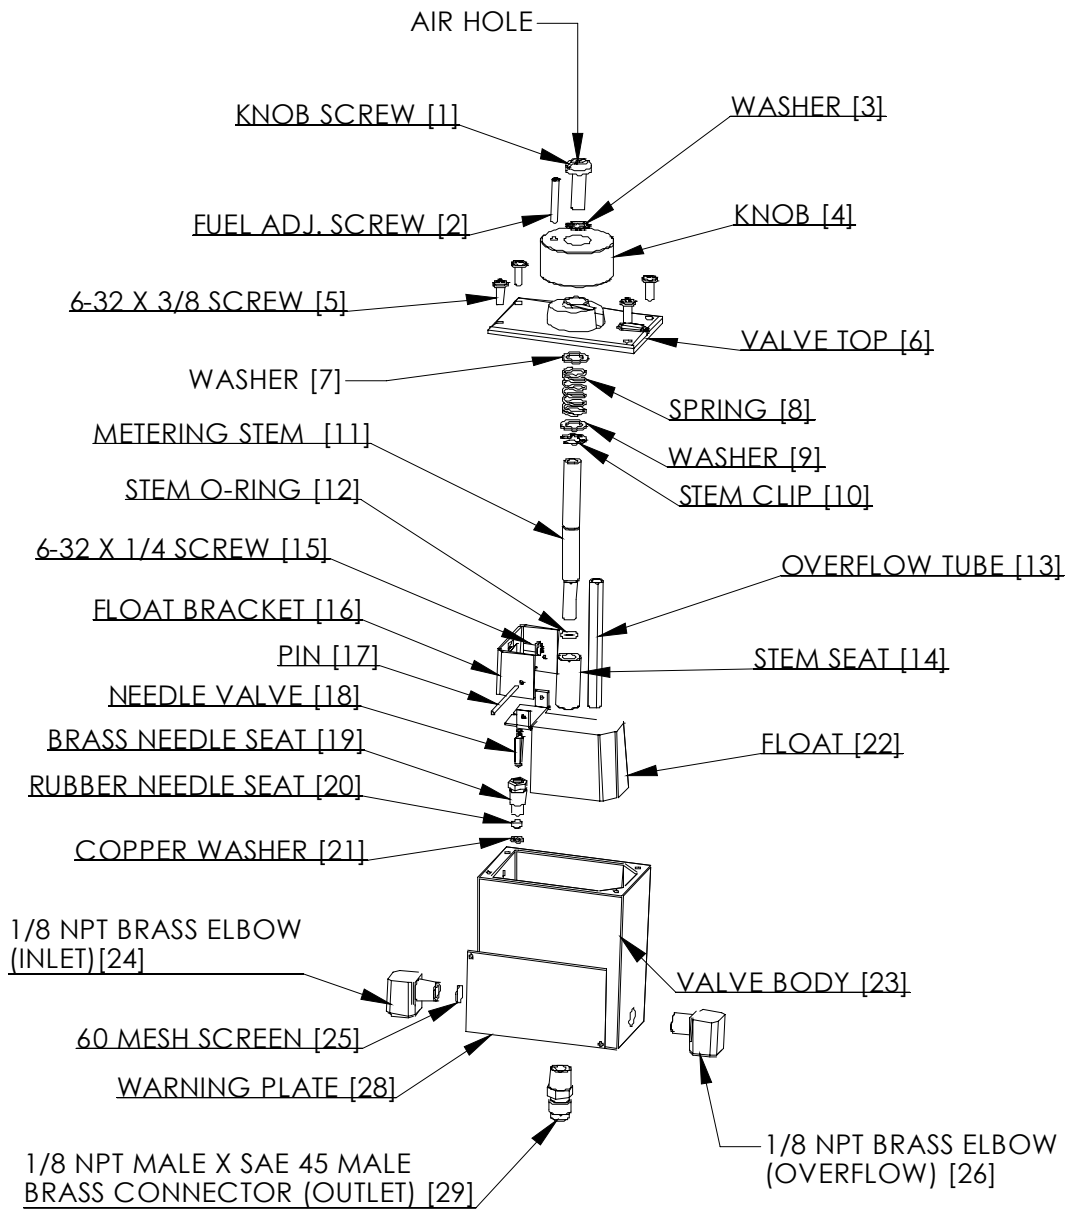


EXPLODED VIEW OF METERING VALVE

## **CLEANING THE NO. 100 AND 120**

Depending on the quality of the fuel that you use and how often you use the heater, some carbon may build up around the legs of the vaporizing stem and on the inside of the burner. You may clean the burner by reaching in through the door or by removing the burner.

### **TO REMOVE THE BURNER:**

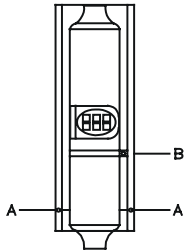

- Disconnect the fuel feed and the over-flow lines
- Remove screws "A", one on each side of the stainless housing and loosen the brass screw "B" on the right side of the combustion chamber under the door with the window. The burner will now drop out.

1. To clean the burner, first take out the burner ring, the brass vaporizing stem and the stem holder. Next place a pan under the burner to catch the fuel when you remove the 1/4" clean out plug in the bottom of the burner. Then clean out any carbon pieces in the burner. You may have to use a scraper to remove the build up of carbon. The base of the burner should be free of any carbon so that the four feet of the brass vaporizing stem make "metal to metal" contact with the base of the burner. Any carbon will act as an insulator and you will not get a good heat transfer from the brass vaporizing stem to the base of the burner.

2. Next, use the auger supplied with the heater to ream out the burner oil inlet hole in the base of the burner. Later after the burner is reinstalled and before you replace the 1/4" clean out plug, flush out the system by turning on the metering valve (carburetor) and letting some fuel drip out the bottom.

3. There are four rows of holes in the side of the burner. These must all be clean. Use a No. 53 (0.059) drill bit to clean the two upper rows of holes and a No. 51 (0.067) drill bit to clean the bottom two rows of holes.

### **"Never! Never! Never! Enlarge or alter these holes."**

Do not use a rag to wipe the inside of the burner, because you will be pushing carbon into these holes. If needed, use a wire brush.

Now replace the 1/4" clean out plug, be sure to use some sealer and don't over tighten.

Replace the brass vaporizing stem and stem holder.


### **Be sure all four feet are flat on the bottom of the burner base.**

Replace the burner ring. Note that the correct way is with the flange facing down.

Reconnect the fuel feed and overflow lines.

## **CLEANING THE NO. 170.**

Depending on the quality of the fuel that you use and how often you use the heater, some carbon may build up around the base of the vaporizing stem and on the inside of the burner. You may clean the burner by reaching in through the door or by removing the burner.

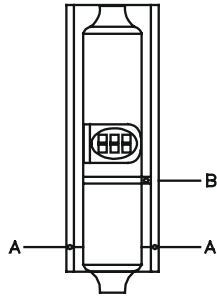

### **TO REMOVE THE BURNER:**

--Disconnect the fuel feed and the over-flow lines  
--Remove screws "A", one on each side of the stainless housing and loosen the brass screw "B" on the right side of the combustion chamber under the door with the window. The burner will now drop out.

1.To clean the burner, first take out the burner ring and the stainless steel 4 post-vaporizing stem. Next place a pan under the burner to catch the fuel when you remove the 1/4" clean out plug in the bottom of the burner. Then clean out any carbon pieces in the burner. You may have to use a scrapper to remove the build up of carbon. The base of the burner should be free of any carbon so that the four feet of the stainless steel vaporizing stem make metal to metal contact with the base of the burner. Any carbon will act as an insulator and you will not get a good heat transfer from the vaporizing stem to the base of the burner.

2.Next, use the auger supplied with the heater to ream out the burner oil inlet hole in the base of the burner. Later after the burner is reinstalled and before you replace the 1/4" clean out plug, flush out the system by turning on the metering valve(carburetor) and letting some fuel drip out the bottom.

3.There are four rows of holes in the side of the burner. These must all be clean. Use a No. 52 (0.063) drill bit to clean the upper two rows of holes and a No. 50(0.070) drill bit to clean out the bottom two rows of holes.

### **"Never! Never! Never! Enlarge or alter these holes.**

Do not use a rag to wipe the inside of the burner, because you will be pushing carbon into these holes. If needed, use a wire brush.

Now replace the 1/4" clean out plug, be sure to use some sealer and don't over tighten.

Replace the vaporizing inset. Replace the burner ring. Note that the correct way is with the flange facing down.

Reconnect the fuel feed and overflow lines.

## **CLEANING THE NO. 180, 200 AND 250 STOVE.**

Depending on the quality of the fuel that you use and how often you use the heater, some carbon may build up around the burner oil inlet and on the inside of the burner.

For the 180, it is much easier to clean the heater if you remove it from the boat. Then remove the shroud from the heater. Then separate the upper part of the burner from the bottom, by removing the 4 screws.

If you do not wish to remove the heater from your boat, you must reach down through the top to clean the burner.

**1.** To clean the burner, first take out the burner ring and the stainless steel vaporizing insert. Next place a pan under the burner to catch the fuel when you remove the 1/4" clean out plug in the bottom of the burner. Then clean out any carbon pieces in the burner. You may have to use a scraper to remove the build up of carbon. The base of the burner should be free of any carbon so that the four feet of the vaporizing stem make metal to metal contact with the base of the burner. Any carbon will act as an insulator and you will not get a good heat transfer from the vaporizing stem to the base of the burner.

**2.** Next, use the auger supplied with heater to ream out the burner oil inlet hole. After the burner is reinstalled and before you replace the 1/4" clean out plug, flush out the system by turning on the metering valve (carburetor) and letting some fuel drip out the bottom.

**3.** There are four rows of holes in the side of the burner. These must all be clean. Use a No. 52(.063) drill bit to clean the upper two rows of holes and a No. 50(.070) to clean the bottom two rows of holes.

**"Never! Never! Never! Enlarge or alter these holes."**

Do not use a rag to wipe the inside of the burner, because you will be pushing carbon into these holes. If needed use wire brush.

Now replace the 1/4" clean out plug, be sure to use some sealer and don't over tighten.


Replace the vaporizing insert. Replace the burner ring. Note that the correct way is with the flange facing down.

Reconnect the fuel feed and overflow lines.




## **THE DRAFT ASSIST FAN (OPTION)**

If you decide not to install the “Balanced Draft” System and you experience “back drafting” or “down drafting” (see Page 9), the Draft Assist Fan is an option that may help solve the problem. When using the Draft Assist Fan you must attempt to match the velocity of the fan to the velocity of the wind in the down draft. The Draft Assist Fan mounts on the air intake (bottom) of your heater. You must remove the “Draft Regulator” in order to install the Draft Assist Fan.

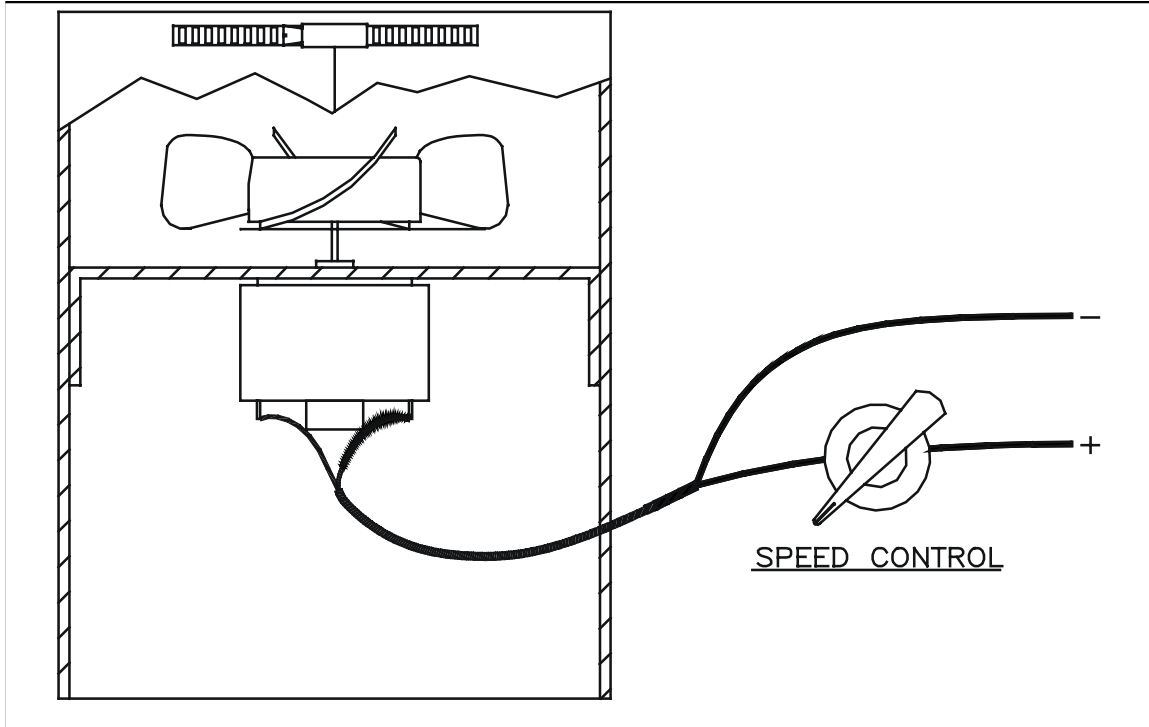

# THE DRAFT REGULATOR

## CUT-AWAY VIEW OF THE DRAFT REGULATOR

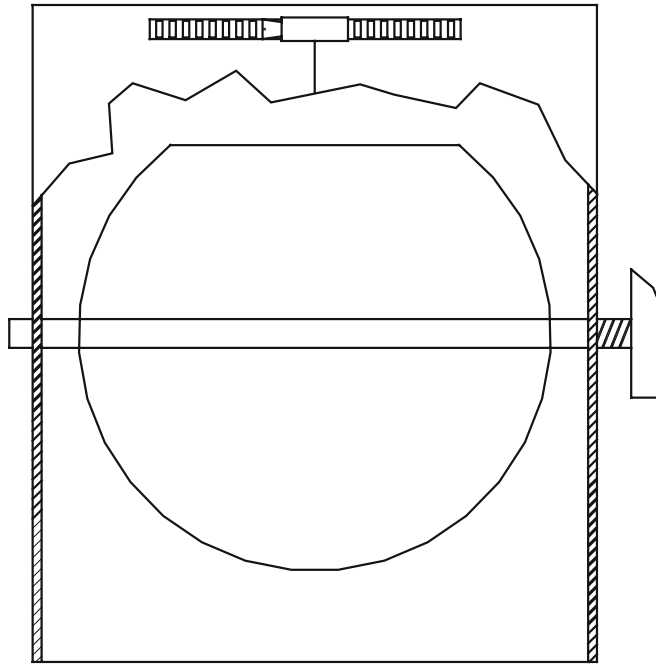

STANDARD ON ALL HEATERS- (NOT ON NO. 190, 200 AND 250 STOVES)

The Draft Regulator is located at the base of the heater and is provided as standard equipment on all heaters-No. 100, 120, 170, and 180.

If you have ***too much*** exhaust pipe, you will have ***too much*** draft and the flame will be ***drawn down*** into the burner. This will result in soot on the window, in the burner and ultimately in the exhaust pipes.

The Draft Regulator is used to slow down the air (draft) entering the heater. The fine-tuning of the draft will increase the heater's efficiency and performance. This is more noticeable on low setting. If you close the regulator (say 45 Degrees or even more if you have a long exhaust pipe) on low setting, you may have to open it on medium and high setting - on higher setting you need more air to get complete combustion.


## **IMPORTANT!!! IMPORTANT!!! IMPORTANT!!!**

*At any time and after maintenance on the burner be sure to:*

1. Insert the burner ring with the flange down. The burner ring ***must be*** seated fully down.
2. On the 100 and 120 heaters, insert the brass vaporizing stem ***flat*** on the bottom of the burner base, making sure ***all four feet are flat on the bottom of the burner base. The legs may not be flat after cleaning, therefore be sure to straighten them so the feet are flat on the bottom of the burner base.***

These two steps are very important to obtain proper vaporization of fuel. The heater will not perform satisfactorily if these two steps are not followed carefully and correctly.

### **CUT AWAY VIEW OF THE 100/120 BURNER**

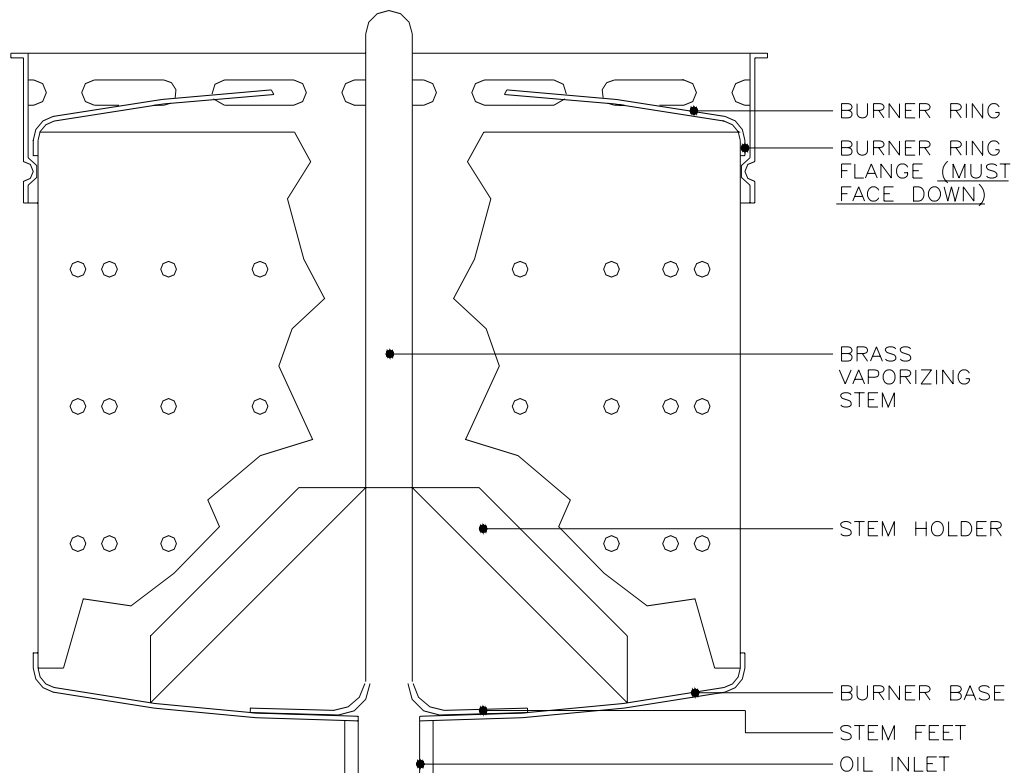


## **IMPORTANT!!! IMPORTANT!!! IMPORTANT!!!**

*At any time and after maintenance on the burner be sure to:*

1. Insert the burner ring with the flange down. The burner ring ***must be*** seated fully down.
2. On the 170, 180, 190, 200 and 250 heaters, insert the vaporizing insert ***flat*** on the bottom of the burner base. ***All four feet are flat on the bottom of the burner base. The legs may not be flat after cleaning, therefore be sure to straighten them so the feet are flat on the bottom of the burner base.***

These two steps are very important to obtain proper vaporization of fuel. The heater will not perform satisfactory if these two steps are not followed carefully and correctly.

### **CUT AWAY VIEW OF THE 170, 180, 190, 200 AND 250 BURNER**

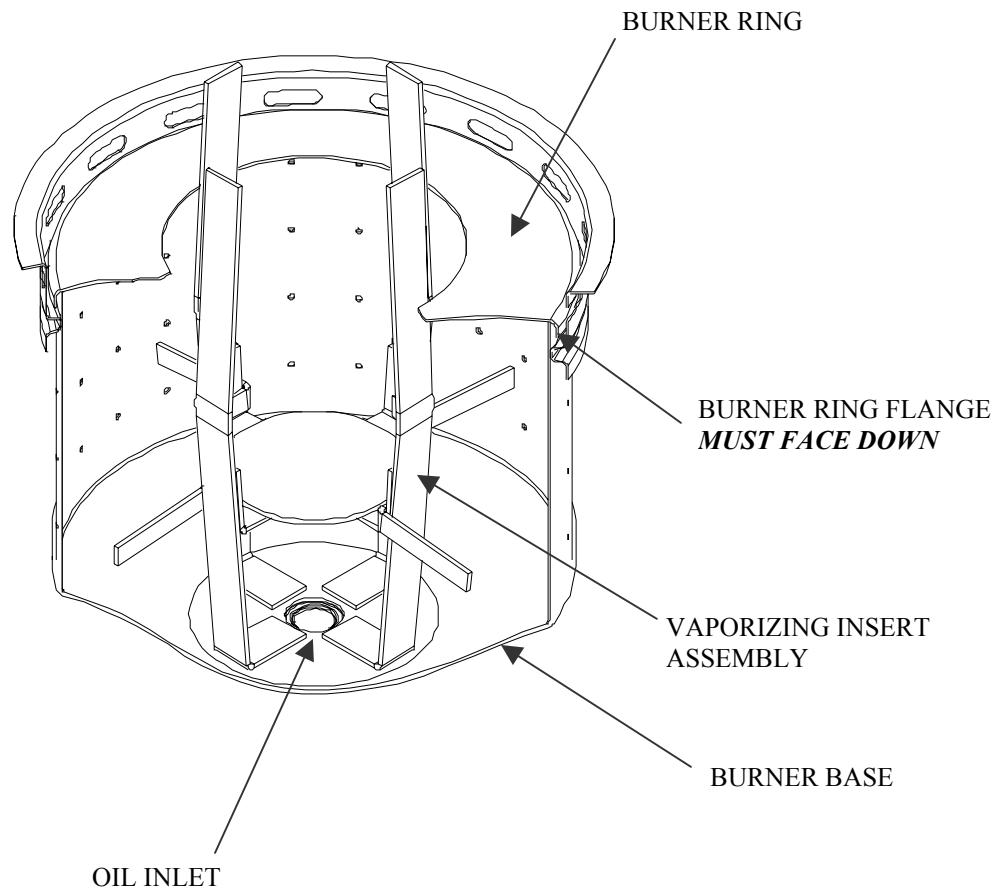

## ***TROUBLE SHOOTING.***

### **Theory of Operation**

**Note: The fire must always be burning above the ring on the 100 and 120 heaters!**

#### **Reason:**

In order for the heater to not smoke, we have designed our burner to burn fuel vapors - diesel, kerosene or stove oil. To do this, the flames surround the brass vaporizing stem above the burner ring. The stem conducts heat to the base of the burner and heats it. When the fuel enters the burner, through the hole in the center of the base of the burner, it immediately turns to vapor. The fuel vapor mixes with air that enters through the four rows of holes in the side of the burner and burns above the ring. If the heater is burning too low, the flame will be below the ring, hence there will not be enough heat created to heat the base of the burner and vaporize the fuel. If the heater is set too high, there will not be enough air coming in through the holes to provide complete combustion with the fuel, and hence the heater will smoke. If there is not enough heat or air for combustion the mica window will get covered with soot and smoke may come out of the rain cap (exhaust).

#### **Problem #1: Fuel will not flow into the burner freely.**

(This you can visually see when you remove the ring etc.)

- 1.1 Solution: If using a “Gravity Day Tank” check to see if there is fuel in the tank and that the “shut off” is open. If using an electric pump check to see that it is” turned on”.
- 1.2 Solution: The hole in the bottom (burner oil inlet) of the burner may be plugged. This can be reamed out using the “auger” that came with the heater. You can either try to clean the inlet hole by turning the auger into the inlet hole from the burner side (top) like a corkscrew or if you feel that there is still dirt in the hole you can remove the “clean out” plug in the bottom of the burner and “auger” the hole from the bottom of the burner and the top. Run the auger all the way through. Clean the copper tube by running a flexible wire through it.
- 1.3 Solution: Check to ensure that the rubber hose running from the metering valve (carburetor) to the burner is not flattened. Although we use a thick wall rubber hose to prevent flattening, this is still possible on older heaters. The hose flattens and does not allow a full flow of fuel. You can check this by squeezing the hose at the bend to see if the fuel flow increases. If this is the problem, replace the hose.
- 1.4 Check the “air” hole in the control knob and make sure it is “clear”.
- 1.5 Check to see that the “Screen” on the “ Fuel Inlet” of the metering valve is “Clean”. See Page 13, Cross Sectional Front View of Metering Valve.” You must remove the brass elbow to access the screen – it is “Pushed” into the valve.

**Problem #2: The flame is below the ring.**

Solution: Increase the flow of fuel into the burner. This is done by turning the knob on the metering valve (carburetor) to a higher number. Advance one or two numbers and then wait approximately five minutes for the burner to stabilize. If the flame is still below the ring advance one or two more numbers. Continue this process until the flame burns above the ring.

If you reach Position 9 and the flame is still below the ring this means that the viscosity of your fuel is thicker than the viscosity of the fuel that we used for calibrating the carburetor valve. This is not a problem. We can increase the flow of fuel by turning the fuel adjusting screw on the knob of the metering valve “in” (clockwise) while the heater is still burning. Use the Allen Key that came with the heater and turn the fuel adjusting screw in (clockwise) one complete turn. Wait approximately five minutes. The flame will increase. If it is still below the ring, turn one more turn clockwise. Continue the procedure until the flame is above the ring and no flame (fire) is below the ring. When burning properly you should see **NOTHING** burning below the ring, only fuel vapors. On the 170, 180, 190, 200 and 250 the flame can be slightly below the ring and still get good results.

Now that you have the flame above the ring you must adjust (calibrate) the valve so that the flame is just above the ring at approximately Number 3 setting, for “Low”. First turn the knob to Number 6 and the flame will drop below the ring. Now turn the fuel adjusting screw in (clockwise) one turn and wait five minutes. The flame will increase. If it is not above the ring, similar to where it was before (at Number 9) then turn the screw in one more turn (clockwise). Now that the flame is back to the same position at Number 6 as it was at Number 9 we would like you to turn the knob to Number 3.

Again the flame will decrease and you must turn the fuel adjusting screw in (clockwise) one full turn, the same as you did when you were calibrating at Number 6. Repeat until you have the flame just above the ring at Number 3.

Now you have your heater calibrated for Number 3 to be the “Low Setting”. The “High” setting should be approximately Number 7. Note: The operating range of our heater is approximately four to five numbers. In other words, “Low” is Number 3, “High” is Number 7. If you wished you could calibrate it where “Low” is Number 4 and “High” is Number 8. This need to calibrate was caused by your fuel having a different viscosity to the fuel, which we used, at the factory for calibration.

You may find that you must recalibrate between summer fuel and winter fuel or between different fuel suppliers. Most of the time the only difference will be that “Low” is number 3 at one time and “Low” is Number 4 or 5 another time.

**Problem #3: When you turn the knob on the metering valve to “OFF”, the fuel continues to flow into the burner.**

**Solution:** Refer to the drawing on Page 14 of the Instruction Manual.

Note the “O” ring in the metering valve that shuts off the flow of oil, Item “O”. Check to see that the “O” Ring is intact - e.g. not broken or missing or crimped. To check the “O” Ring you must disassemble the metering valve. **Note:** be sure that the shut off to the metering valve is turned off. Remove the four screws and lift off the knob and the top plate. **Note:** When you disassemble the valve, fuel from the valve will flow into the burner and before lighting the burner again, this fuel must be removed. This can be done by using paper towel or rags as a “sponge”. If the “O” Ring is defective, contact your local Sigmar dealer or the Sigmar Factory for a replacement.

**Problem #4: Fuel flows out of the “overflow”.**

Solution 4.1: If you are using a “pulse” pump, the pressure on the pump may be set too high - maximum 3 PSI. If it is set too high, the float in the metering valve will not have enough buoyancy to close the “needle seat” and stop the fuel flow in the valve. You must adjust the pump pressure to be less than 3 PSI. If your pump is not adjustable, you will require a pressure regulator.

Solution 4.2: You may have an obstruction holding the “needle seat” open. You must remove the “needle seat” and check (see Page 14 for instructions on removal).

Solution 4.3: The float may be saturated. You can check this, by removing the control knob and top (remove 4 screws). Plug the hole in the base of the metering valve with a wooden pencil. Turn on the fuel. The float should “rise up” and turn off the fuel. If it doesn’t check to see that it isn’t “jammed” and then contact factory for authorization to return valve for re-building.


**Problem #5: Flame is burning very “Lazy”.**

Solution 5.1: This is caused by a shortage of air for combustion. Clean the 4 rows of air holes in burner. For the Models 100 and 120, go to Page 15, Paragraph 3. For the Model 170, go to Page 16, Paragraph 3. For the Models 180, 190, 200 and 250, go to Page 17, Paragraph 3. **Note: Do not enlarge the holes.**

Solution 5.2: If you have the “Balanced Draft” on your heater consider the following: If you have a long run of “Air Inlet” hose, e.g. more than 4 - 5 feet, or if you have many “twists” and “turns” in your hose this can cause a restriction in the flow in inlet air. You can either shorten the length or straighten the run.


Solution 5.3: Check if “Draft Regulator” at bottom of the burner is “open” physically. “Feel” to be sure “Draft Regulator” is open. The black knob on the regulator may have slipped on the shaft and it may indicate that the “Regulator” is open while it may be closed.

3  
TYPICAL INSTALLATION

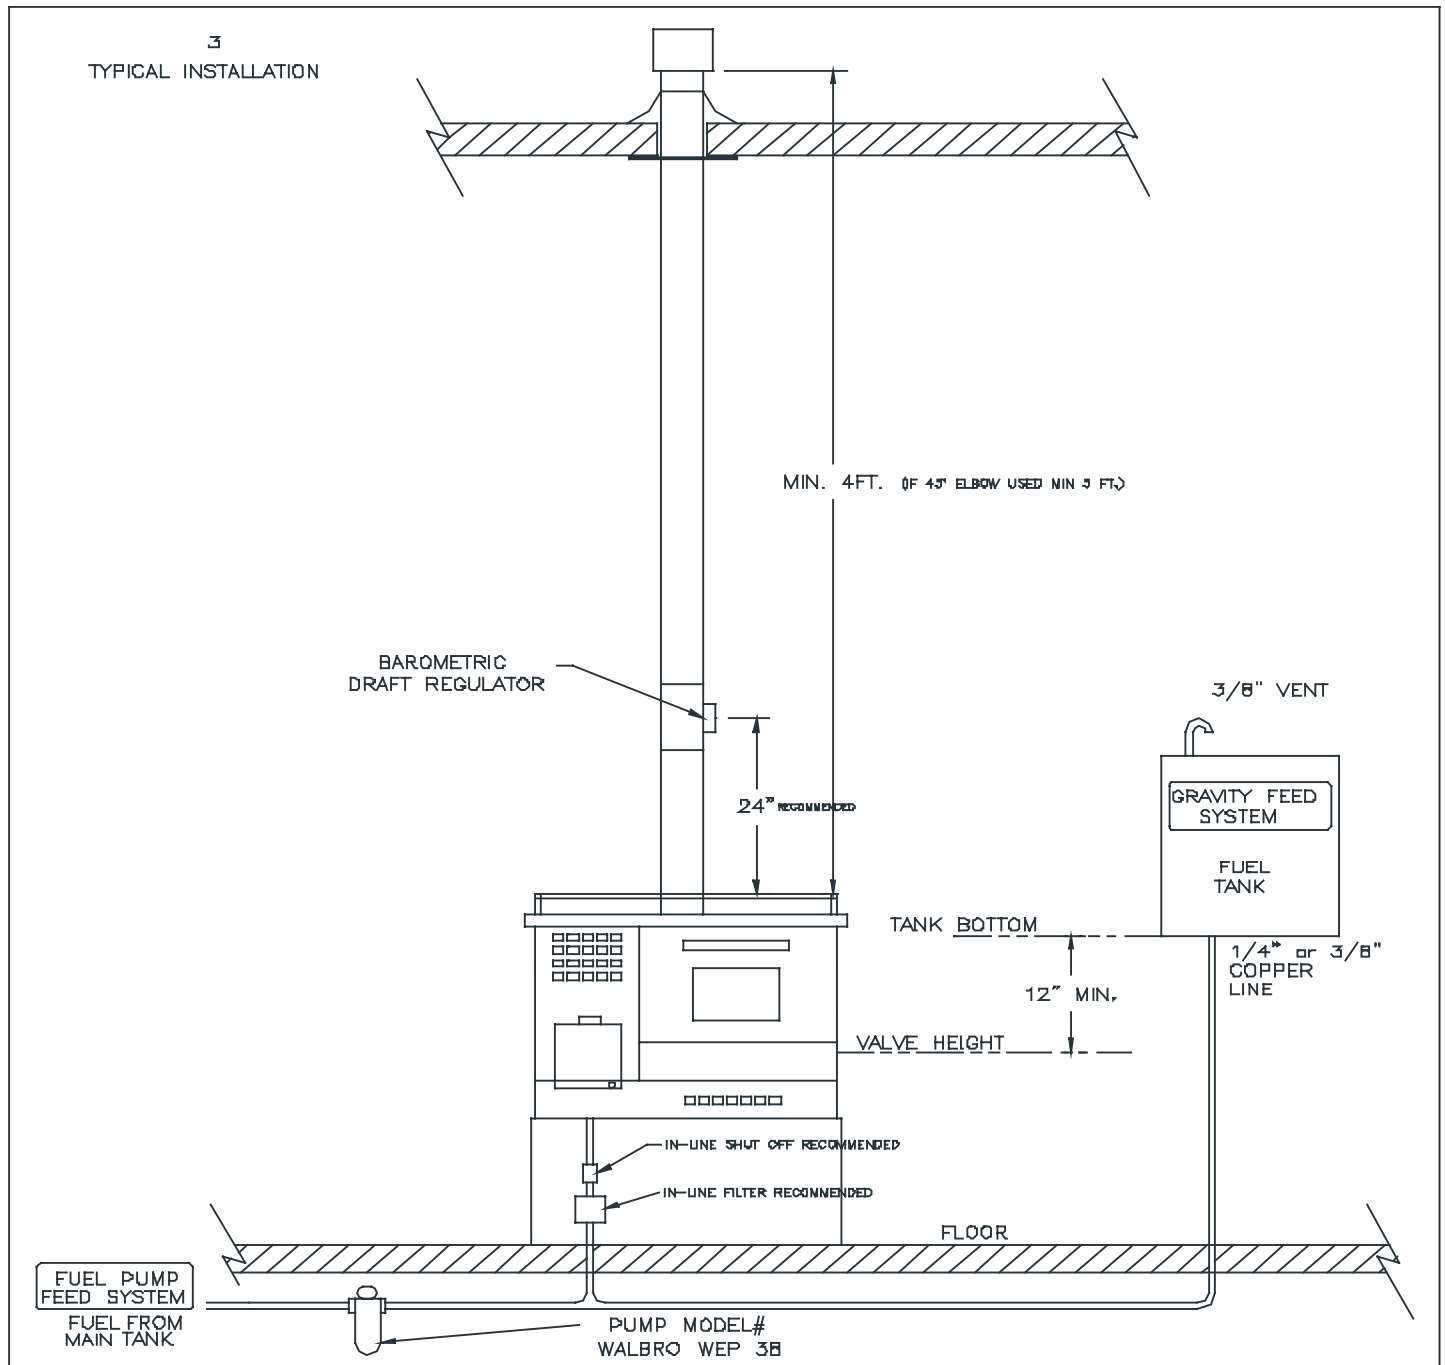




## RECOMMENDED INSTALLATION REQUIREMENTS

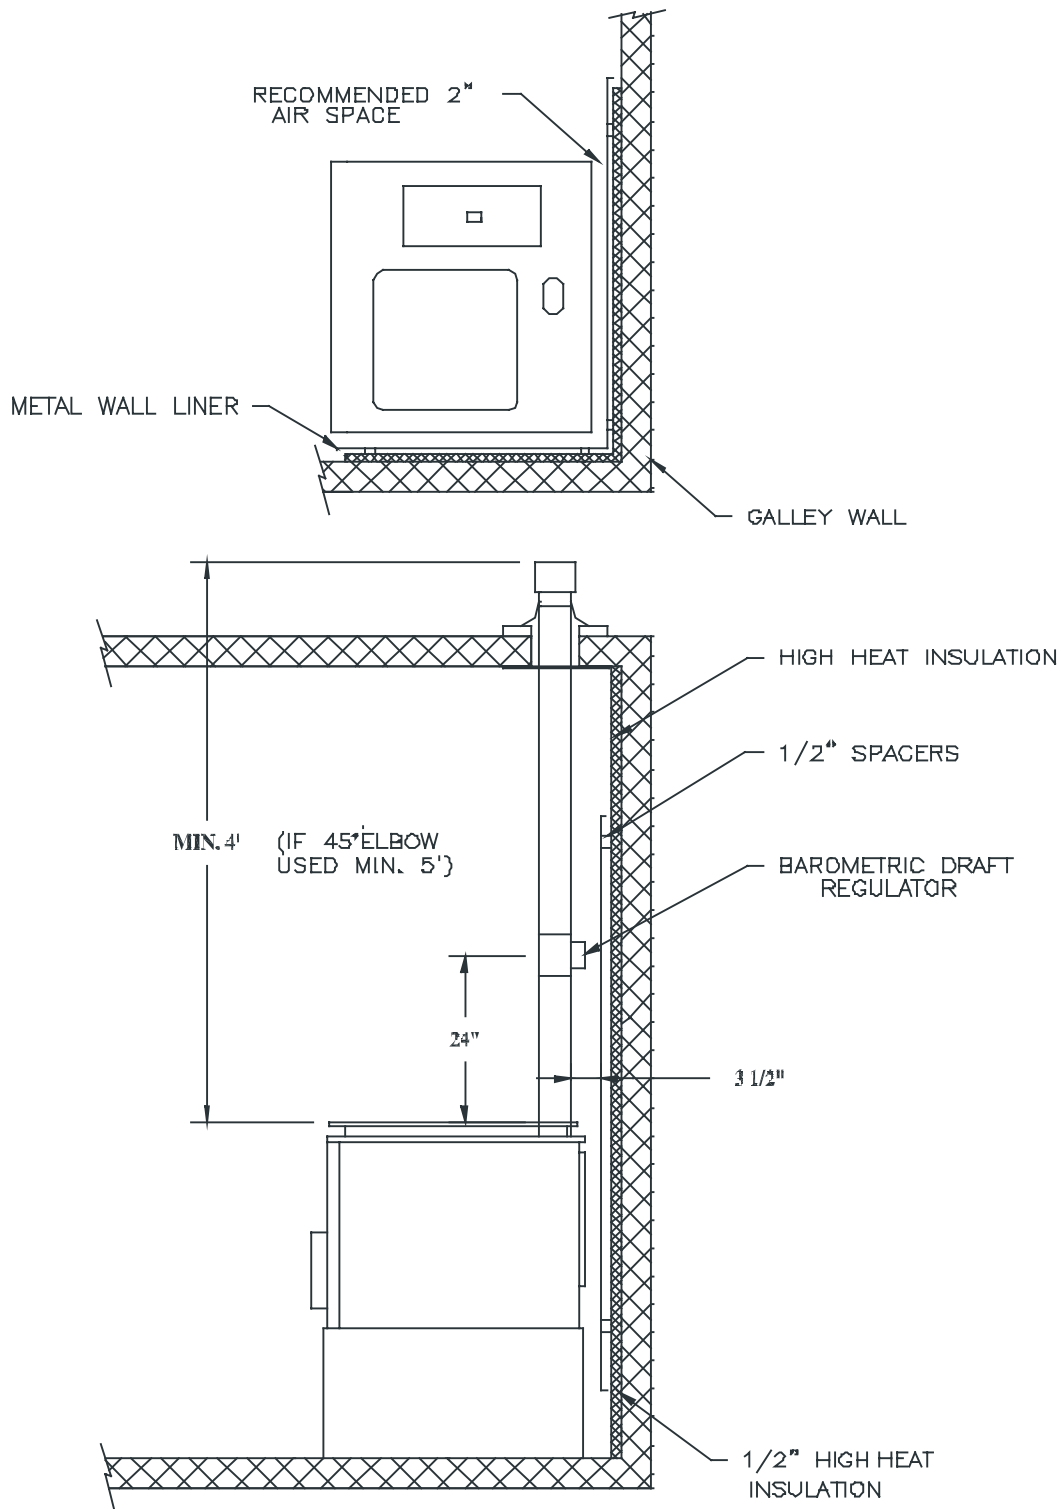




## RECOMMENDED INSTALLATION REQUIREMENTS

FRONT VIEW

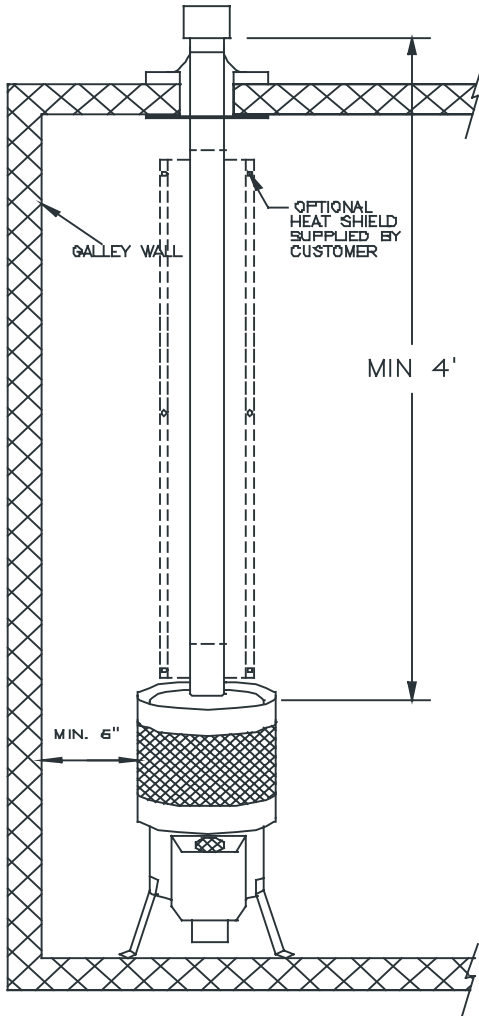

MIN. 4' { WITH 45° ELBOWS } MIN. 4'  
MIN. 5'

SIDE VIEW

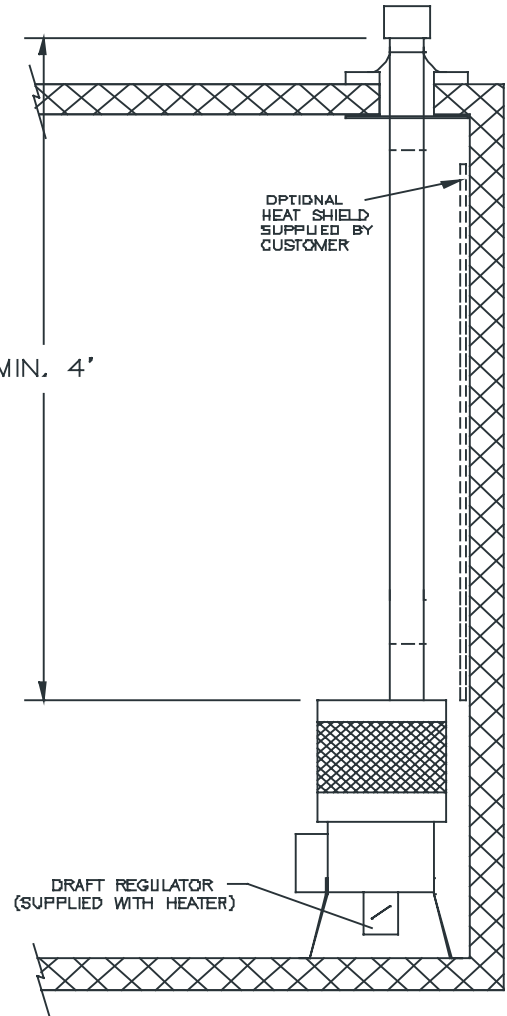

TYPICAL INSTALLATION FOR: 180

## **ONE YEAR LIMITED WARRANTY**

Manufacturer of the Sigmar cabin heaters does hereby warrant said product, to be free of defects in workmanship and material for a period of one year from date of purchase. This warranty is subject to, but not limited to the following exclusions and conditions:

1. Product has not been repaired, altered, misused or exposed to corrosive conditions.
2. Defective installation, operation, or maintenance contrary to the written instructions furnished with the unit.
3. Any damage caused by soot, smoke, and leakage of fuel, odor or heat.
4. Warranty is provided to the original owner and is not transferable to other parties.
5. Repair or replacement of defective parts will be made available at the manufacturers designed service representative. Owner, not the manufacturer, shall be responsible for the return of defective parts, and payment of all delivery, installation and removal charges.

## **LIMITATION OF IMPLIED WARRANTIES**

The foregoing warranty is exclusive and in lieu of all other warranties, oral or written, expressed or implied; but not limited to any warranty of merchantability or fitness for a particular purpose.

## **LIMITATION OF LIABILITY**

In no event shall the manufacturer be liable for any incidental or consequential damages, or personal injury related to the product. Some do not allow the exclusion or limitation of incidental or consequential damages so the above limitation or exclusive may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which may vary.

## **CLAIMS PROCEDURE**

The original owner, upon discovering a defect must notify the manufacturer's designated service representative in writing, including model, serial number, date and proof of purchase, and nature of problem.

**Force 10 Marine**  
**23080 HAMILTON ROAD,**  
**RICHMOND, B.C.**  
**CANADA**  
**V6V 1C9**  
**PHONE: 800 663 8515 OR 604 522 0233**  
**FAX: 604 522 9608**  
**EMAIL: sales@force10.com**

**IMPORTANT: OWNER SHALL KEEP THIS CERTIFICATE!**